

Inertial Labs

Inertial Labs Attitude and Heading Reference System, AHRS-10 is a high-performance strapdown system that determines absolute orientation (heading, pitch and roll) for any device on which it is mounted. Orientation is determined with high accuracy for both motionless and dynamic applications.




The Inertial Labs AHRS-10 utilizes 3-axes each of precision accelerometers, magnetometers and gyroscopes to provide accurate Heading, Pitch and Roll of the device under measure. Integration of gyroscopes' output provides high frequency, real-time measurement of the device rotation about all three rotational axes.

Accelerometers and Fluxgate magnetometer measure absolute Pitch, Roll and magnetic Azimuth at AHRS initial alignment as well as providing ongoing corrections to gyroscopes during operation.

Parameter	AHRS-10B	AHRS-10P	
Heading dynamic accuracy in temperature range, RMS	1 deg	0.6 deg	
Pitch & Roll dynamic accuracy in temperature range, RMS	0.5 deg	0.08 deg	
Gyroscopes Bias instability in temperature range, RMS	0.2 deg/sec	0.008 deg/sec	
Accelerometers Bias instability in temperature range, RMS	0.5 mg	0.5 mg	
Dimensions	90 × 27 × 26 mm	90 × 27 × 26 mm	
Weight	77	84	
Interface	RS-232, RS-422, CAN	RS-232, RS-422, CAN	

KEY FEATURES AND FUNCTIONALITY

- Two models (10B and 10P) with differentiated performance and price
- State-of-the-art algorithms for different dynamic motions of Robots, UAV, UUV, UGV, AGV, ROV, Gimbals and Antennas
- Highly accuracy Magneto-Inductive and Fluxgate magnetometers
- Gyro-Stabilized Slaved Magnetic Heading
- Suitable for Primary Attitude Reference
- Advanced Kalman Filter based sensor fusion algorithms
- Embedded 2D and 3D magnetic calibration on hard and soft iron
- All solid state components (no moving parts)
- Full temperature calibration of all sensing elements
- Environmentally sealed (IP67) and Compact design

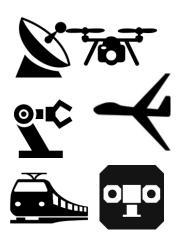

One of the key elements to the success of Inertial Labs AHRS is its use of **Inertial Labs 8mm Fluxgate Magnetometers** which has distinct advantages over commonly used magneto-inductive or magneto-resistive magnetometers.

In operation over time and temperature fluxgate magnetometers have superior stability and repeatability. In terms of sensitivity, fluxgate magnetometers provide up to two orders of magnitude increased sensitivity.

In addition to the performance advantages, unlike the chip-level magnetometer technology, fluxgate magnetometer technology has been depended on for over 70 years to provide an accurate reference to North. It remains the most reliable magnetic sensor technology for determining an object's heading.




AHRS-10 Datasheet Rev. 5.0


Parameter	Units	AHRS-10B	AHRS-10P		
Output signals			; PPS Time; Accelerations; Angular		
<u>-</u>	rates; Magnetic field; Delta Theta & Delta Velocity				
Available colors of enclosure					
Update rate	Hz		ading, Pitch, Roll)		
Update rate	Hz	200 (IMU data)	2000 (IMU data)		
Start-up time	sec		< 1		
Heading	Units	AHRS-10B	AHRS-10P		
Range	deg	0 to 360	0 to 360		
Angular Resolution	deg	0.01	0.01		
Static Accuracy in Temperature Range	deg, RMS	0.8	0.3		
Dynamic Accuracy	deg RMS	1	0.6		
Data rate	Hz	200	200		
Pitch and Roll	Units	AHRS-10B	AHRS-10P		
Range: Pitch, Roll	deg	±90, ±180	±90, ±180		
Angular Resolution	deg	0.01	0.01		
Static Accuracy in Temperature Range	deg, RMS	0.2	0.05		
Dynamic Accuracy	deg RMS	0.5	0.08		
Data rate	Hz	200	200		
Relative altitude	Units	AHRS-10B	AHRS-10P		
Measurement range	meters	-600 to 9000	-600 to 9000		
Resolution	meters	0.01	0.01		
Gyroscopes	Units	AHRS-10B	AHRS-10P		
Measurement range	deg/sec	±1864	±450		
Bandwidth	Hz	50	260		
Bias in-run stability (RMS, Allan Variance)	deg/hr	8	1		
Bias residual error in temperature range, RMS	deg/hr	720	<35		
SF accuracy	ppm	5000	3000		
Noise density	deg/sec√Hz	0.006	0.004		
Non-linearity	ppm	1000	100		
Axis misalignment	mrad	0.2	0.15		
Data rate	Hz	200	2000		
Accelerometers	Units	AHRS-10B	AHRS-10P		
Measurement range	g	±8/±15/±40	±8/±15/±40		
Bandwidth	Hz	260	260		
Bias in-run stability (RMS, Allan Variance)	mg	0.005	0.005		
Bias residual error in temperature range, RMS	mg	<0.5	<0.5		
SF accuracy	ppm	100	100		
Noise density	mg√Hz	0.025	0.025		
Non-linearity	ppm	500	500		
Axis misalignment	mrad	0.1	0.1		
Data rate	Hz	200	2000		
Magnetometers	Units	AHRS-10B	AHRS-10P		
Technology		Magneto Inductive	Fluxgate		
Measurement range	Gauss	±8	±1.6		
Bias in-run stability, RMS	nT	0.8	0.2		
Noise density, PSD	nT√Hz	0.5	0.3		
SF accuracy	%	0.1	0.02		
Environment	Units	AHRS-10B	AHRS-10P		
Operating temperature	deg C	-40 to +75	-40 to +75		
Storage temperature	deg C	-50 to +85	-50 to +85		
Shock & Vibrations		MIL-STD-810G	MIL-STD-810G		
MTBF (G _M)	hours	100,000	100,000		
Electrical	Units	AHRS-10B	AHRS-10P		
Supply voltage	V DC	9 to 28	9 to 28		
Power consumption	Watts	0.75	2.0		
Output Interface	-	RS-232 / RS-422 / CAN	RS-232 / RS-422 / CAN		
Output data format	-	Binary, NMEA ASCII	Binary, NMEA ASCII		
Physical	Units	AHRS-10B	AHRS-10P		
Size	mm	90 x 27 x 26	90 x 27 x 26		
Weight	gram	77	84		
	, J	The state of the s	T 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7		

Inertial Labs

AHRS-10B and AHRS-10P mechanical interface drawing

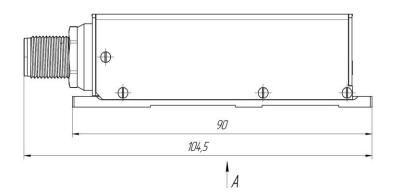



AHRS-10 Datasheet Rev. 5.0

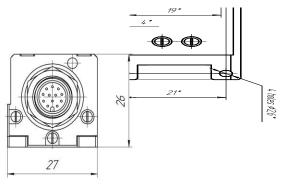

Default (C1)

Optional (C13)

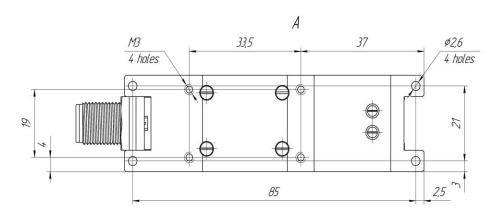

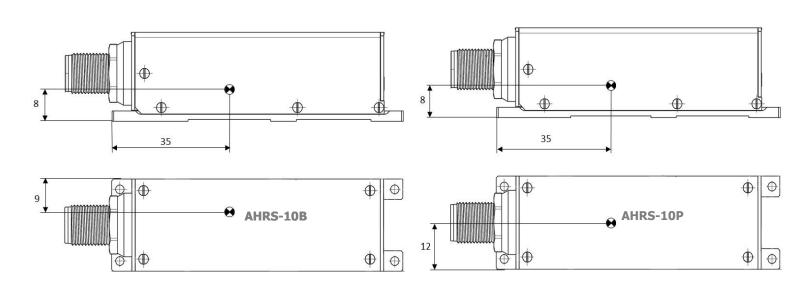


Notes:

- 1. All dimensions are in millimeters.
- All dimensions within this drawing are subject to change without notice. Customers should obtain final drawings before designing any interface hardware.



AHRS-10B & AHRS-10P electrical interface description

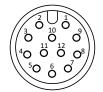

859-012-103R004 NorComp 12 Position Circular Connector Receptacle, Male Pins Solder Cup Gold

DG 000						
	RS-232 and RS-422 interfaces					
PIN	Signal	Description				
1	RS422-A	RS-422 Non-Inverting input				
2	RS232-RX	RS-232 Receiver Input				
3	RS232-TX	RS-232 Transmitter Output				
4	Power	Power Supply Input 9V-30V DC				
5	ExtInp	3.3 V External input				
6	1PPS/TOV	Pulse Per Second/ Time of validity output				
7	RS422-Z	RS-422 Inverting Output				
8	RS422-Y	RS-422 Non-Inverting Output				
9	RS422-B	RS-422 inerting Input				
10	LD	Load				
11	Ground	Power Supply Return				
12	GND	Ground signal				

RS-232 and CAN interfaces					
PIN	Signal	Description			
1	RS232-RX-2	Secondary RS-232 Receiver Input			
2	RS232-RX	RS-232 Receiver Input			
3	RS232-TX	RS-232 Transmitter Output			
4	Power	Power Supply Input 9V-30V DC			
5	ExtInp	3.3 V External input			
6	1PPS/TOV	Pulse Per Second/ Time of validity output			
7	CAN-L	CAN (Low) - Bus differential signal			
8	CAN-H	CAN (high) - Bus differential signal			
9	RS232-Tx-2	Secondary RS-232 Transmitter Output			
10	LD	Load			
11	Ground	Power Supply Return			
12	GND	Ground signal			

	AHRS-10B part numbers description							
Model	Gyro	Accel	Calibration	Connector	Color	Version	Interface	
AHRS-10B	G1864	A8	TMGA	C1 (default)	B (default)	V1	12	
		A15		C4 (obsolete)	D		13	
		A40		C13 (modified enclosure)	G			

Example: AHRS-10B-G1864-A8-TMGA-C1-B-V1.12

AHRS-10P part numbers description								
Model	Gvro	Accel	Calibration	Connector	Color	Version	Interface	
AHRS-10P	G450	A8	TMGA	C1 (default)	B (default)	V1	12	
	G950	A15		C4 (obsolete)	` D ´		13	
		A40		C13 (modified enclosure)	G			

Example: AHRS-10P-G450-A8-TMGA-C1-B-V1.12

Description:

- G450: Gyroscopes measurment range = ±450 deg/sec
- G950: Gyroscopes measurment range = ±950 deg/sec
- G1864: Gyroscopes measurment range = ±1864 deg/sec
- A8: Accelerometers measurement range = ±8 g
- A15: Accelerometers measurement range = ±15 g
- A40: Accelerometers measurement range = ±40 g
- TMGA: Magnetometers, Gyroscopes and Accelerometers
- C1: 12 pins connector (859-012-103R004 NorComp 12 Position Circular Connector Receptacle, Male Pins Solder Cup Gold)
- C4: 4 inch (10 cm) cord, terminated by Binder 6 PIN connector not recommended for new design
- C13: 12 pins connector with modified enclosure (36 mm diameter see above drawing)
- B: Black color
- D: Desert tan color
- G: Green color
- V1.12: RS-232 and RS-422
- V1.13: RS-232 and CAN